


Processing instructions – column shuttering: wall in corner

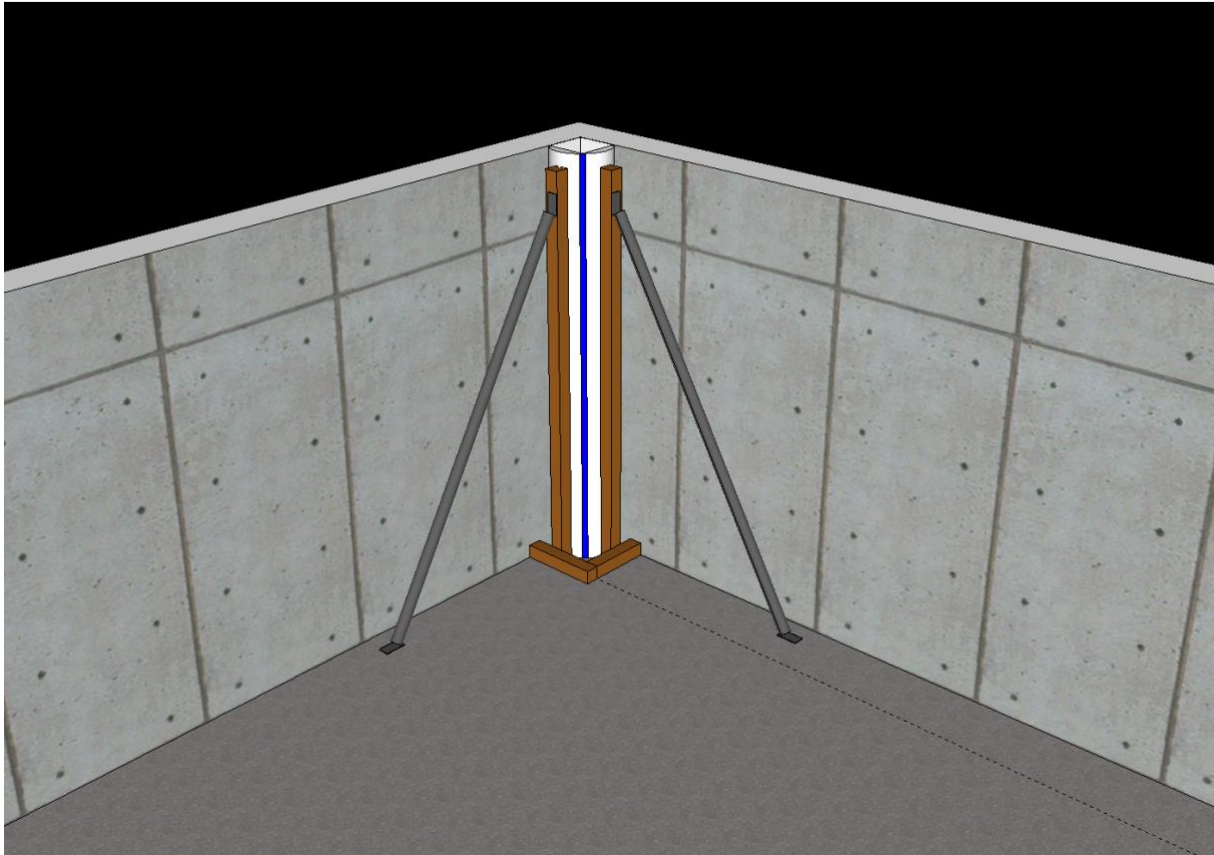

The shuttering is to be braced against existing walls in corners as shown in the illustration. The shuttering must be flat against the wall/corner. Cavities between shuttering and wall must be closed by the customer.